


Spreading Wings S900

User Manual V1.0

2014.08

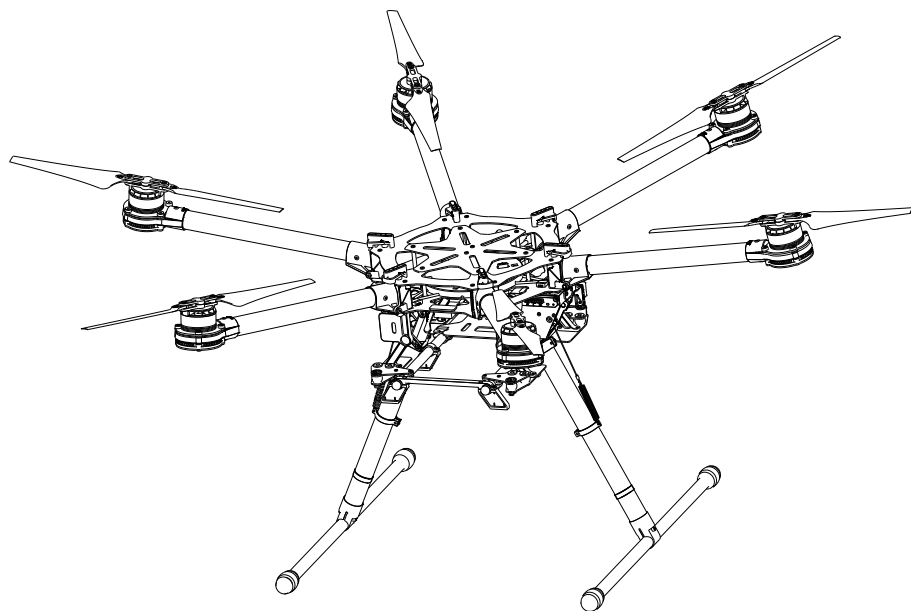

Disclaimer

Thank you for purchasing the S900. Please visit the Spreading Wings S900 page on www.dji.com regularly to keep up to date with product information, technical updates and manual corrections. Information in this manual is subject to change without notice.


In using this product, you hereby agree to this disclaimer and signify that you have understood all points completely. When assembling this product, follow all instructions carefully. The manufacturer and seller assume no liability for any damage or injury arising from the use of this product.

This is a class A product of the FCC certification. In a domestic environment this product may cause radio interference, in which case the user may be required to take adequate measures.

DJI is a registered trademark of DJI. Names of product, brand, etc., appearing in this manual are trademarks or registered trademarks of their respective owner companies. This product and manual are copyrighted by DJI with all rights reserved. No part of this product or manual shall be reproduced in any form without the prior written consent or authorization of DJI.

About

The S900 is designed for professional aerial photography and cinematography. It is user friendly, safe, stabilized and easy to fly while its integrated design makes assembly and configuration simple and fast. Retractable landing gear, vibration dampers, slightly angled arms and a minimalized gimbal mount allow for a clear 360 degree view from the camera. A patented power distribution board, built-in high-speed ESCs and motors with high efficiency propellers ensure dynamic stability and maximized power efficiency. Used with a professional DJI multi-rotor autopilot system, the S900 can hover and fly reliably making it ideal for photography and cinematography.

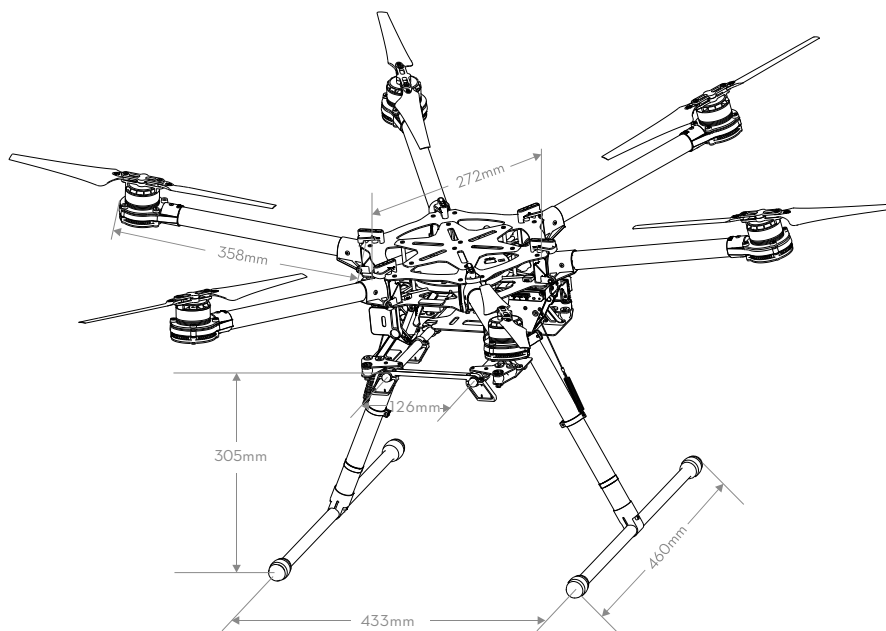

Contents

Disclaimer	2
About	2
Contents	3
Cautions	4
Legend	4
In The Box	5
Mounting the Landing Gear	6
Mounting Frame Arms	7
Mounting Electronics and Wiring	11
Connecting XT60 Ports on the Center Frame	16
Installing Battery	16
Setting Up the Landing Gear	18
Mounting the Gimbal	20
Appendix	22
ESC Sound	22
ESC LED	22
Specifications	22
Gain Value Settings	23
FAQ	24
Soldering the ESC	24
Remounting the Propellers	24
Propeller Precautions	24
Using the Propeller Holder	25
Assembling Motor Vibration Absorbers	25
Remounting the Landing Gear Servo	26
Recalibrating Servo Travel	26
Part List	27
FCC Statements	31

Cautions

When flying, the rotating propellers may cause serious damage and injury. Please fly safe at all times.

Assembly Cautions

1. Use a bracket to mount the GPS module on the center frame to avoid interference with the power board.
2. Ensure the IMU is mounted with the arrow pointing toward the nose of the aircraft.
3. If using a receiver, attach it under the bottom board of the center frame with the end of the antenna facing downwards and away from obstructions to avoid signal loss.
4. Ensure frame arms are mounted correctly.
 - a) Motor mounts with CCW marks should be mounted to the center frame positions with the following marks: M1, M3 and M5.
 - b) Motor mounts with CW marks should be mounted to the center frame positions with the following marks: M2, M4, and M6.
5. Do not remove any glued-in screws.
6. Screws that already have blue glue can be used once without thread locker. On other occasions, apply appropriate thread locker first.
7. The S900 should be lifted off the ground when testing landing gear or recalibrating servo travel.

Flight Cautions

1. ESCs are not water-proof, please do not fly in rain or snow.
2. Ensure all parts are in good condition before each flight. Do not fly with worn or broken parts.
3. Ensure propellers and motors are installed correctly and propellers are unfolded before flying.
4. Ensure ESC signal connectors and power cable connectors are tight before every flight.
5. When flying, maintain a safe distance away from people, buildings, high-voltage lines, tall trees, water and other hazards.
6. Use only 6S LiPo batteries for the power supply.
7. Ensure all output signals from M1 to M6 are in proper working order when using the DJI A2 flight control system to avoid damage or injury.
8. Do not overload the system.
9. Do not get close to or touch motors or propellers when they are spinning as this can cause serious injury.
10. Disconnect the battery and remove the camera during transportation to avoid damage or injury.
11. We strongly recommend using as many DJI manufactured parts as possible.

Others

If you have any problems you cannot resolve, contact your dealer or DJI customer service.

Legend











Important



Hints and Tips

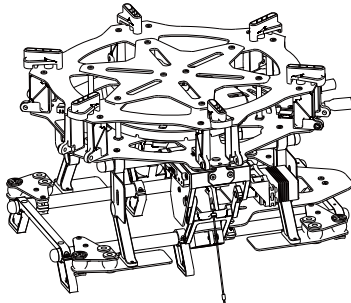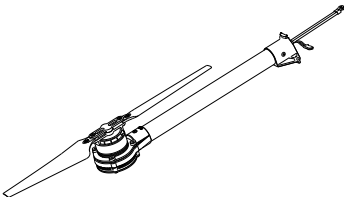In The Box

Center Frame x1	Frame Arms x6
	
Landing Skid Tubes x2 (with Silicone Rubber Dampers)	Landing Gear Legs x2
	
GPS Collapsible Mount x1	Springs x2
	
Connector Set x1	3-PIN Servo Cable x1
	
Screw Package x1	Accessories Package x1
For frame arms mount: M4x35 For landing gear mount: M3x8, M2.5x8 (socket cap), M3x22 (socket cap)	CW propellers x2 CCW propellers x2 Magic tapes x4 The red knobs x6 Landing gear leg rings x4 Soft dampers x50


Tools Required

Tools	Usage
2.0mm Hex Wrench, 2.5mm Hex Wrench	Mounting screws.
Thread Locker	Fastening screws.
Nylon Cable Tie	
Scissors	Binding devices and wires.
Cutting Pliers/Dykes	
Foam Double Sided Adhesive Tape	Mounting receiver, controller and other modules.


Mounting the Landing Gear

Instructions

1. Put one landing gear leg ring onto each landing gear leg.
2. Insert one landing gear leg into each landing skid tube and secure it in place by tightening the M2.5×8 (socket cap) screw. Ensure silicone rubber dampers are attached to each end.
3. Insert the landing gear leg into connection point on the center frame. Affix in place with M3×8 screws.
4. Connect both springs on the legs to the center frame.

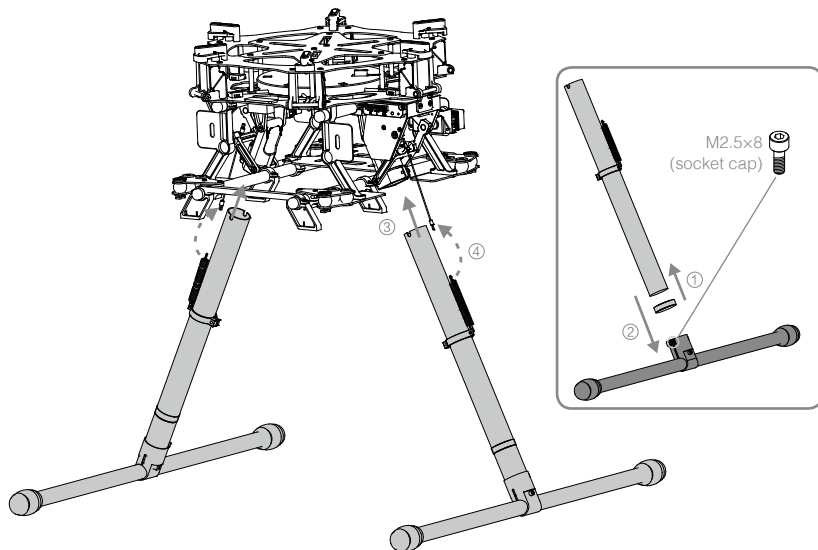

- Note the springs are 58.5mm before connecting to the center frame, and are stretched to 70mm when mounting is completed.
- It is recommended that the landing gear leg ring be placed about 30mm above the landing skid tube.

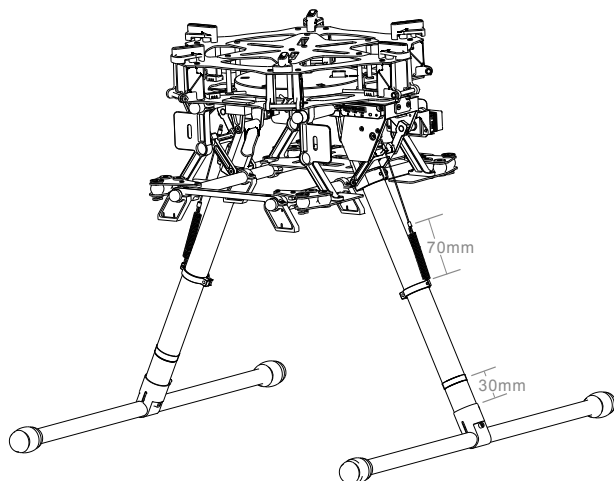


Mounting Frame Arms

Instructions


1. Prepare the arms.

- (1) Check all propellers for cracks, then install and screw each propeller cover on tightly.
- (2) Ensure all motors are mounted firmly and rotate freely.
- (3) Mount all arms with red propeller covers to M1 and M2 to indicate the nose of the S900.
- (4) Identify the CW and CCW marks on the arms. Mount the arms with the CCW mark to the M1, M3 and M5 positions of the center frame. The arms with the CW mark should be mounted to the M2, M4 and M6 positions of the center frame.

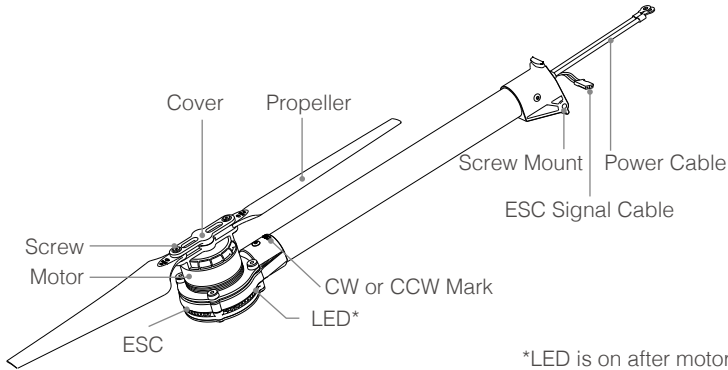


*LED is on after motor started.


2. Insert each frame arm vertically into the mounting area on the center frame.
3. Line up the screw holes of the frame arm and center frame.
4. Insert the M4×35 screw from the right of the frame arm (the thread is located on the left of the screw mount). Tighten each screw correctly. Over tightening may lead to connector abrasion.

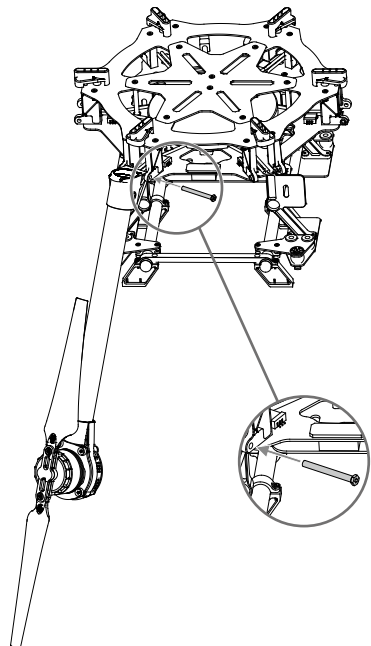


5. Gently lift the frame arm.
6. Twist the red knob to lock each arm in place. Be sure there is an audible click, which indicates a proper lock. Check the arm for movement. To store, untwist the knob and lower the frame arm.

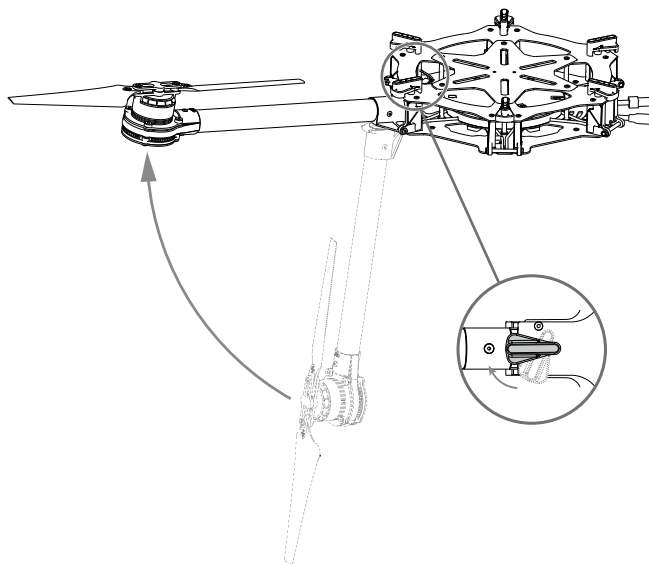


7. Now unscrew 6 screws (M2.5x8 cheese) on the upper plate of the center frame and remove the upper plate. Then unscrew the 4 screws (M3x8 self-tapping, found under the center frame) of the round cover and remove it to gain access to the ESC and power cable installation area.
8. Plug each ESC signal cable into the slot near each arm on the center frame.

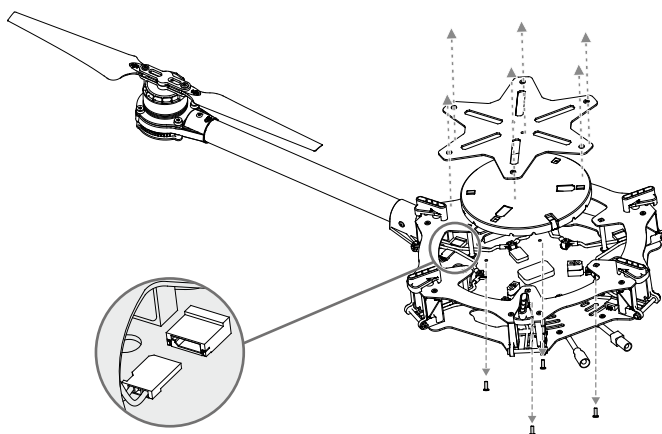


9. Connect the power cables to the center frame. Each cable must be screwed into a positive (+) or negative (-) gold bracket. Each bracket will have two cables of the same color screwed into it. Red cables are positive and black cables are negative.
10. To ensure a reliable connection, rotate the screw until it is both tight and parallel to the connecting bracket.

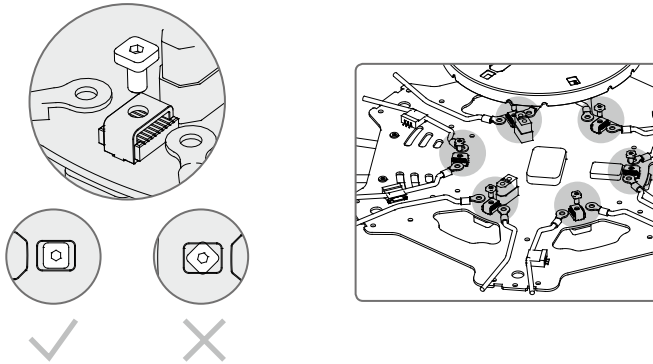


11. Ensure all ESC cables, and power cables are correctly installed onto the center frame.

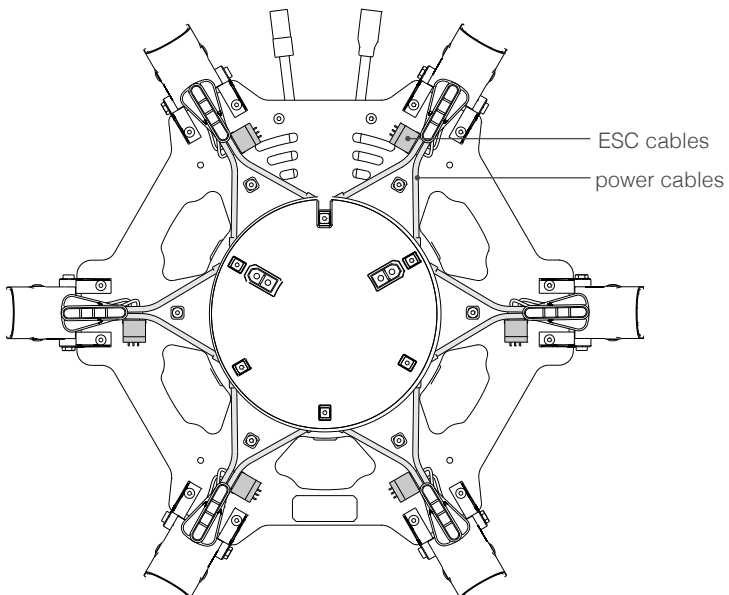

12. Replace the round cover of the center plate, and re-tighten the 4 screws (M3×8 self-tapping). Then replace the upper plate of the center frame, and re-tighten the 6 screws (M2.5×8 cheese).

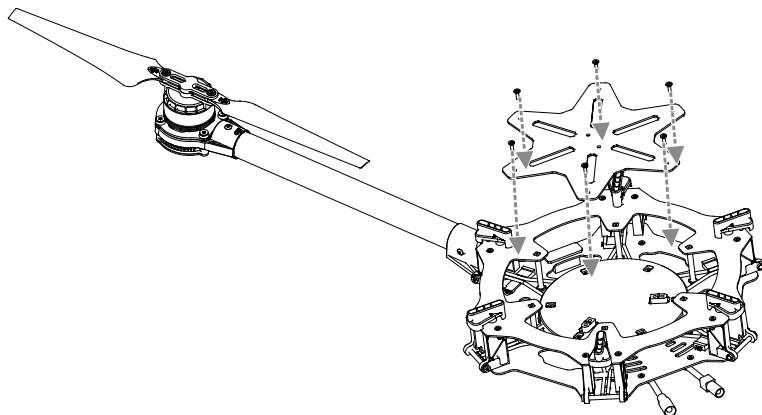

13. Double check all frame arms. Arms M1 and M2 are the forward facing (nose), arms M4 and M5 are the tail. Seen from the top, motors on arms M1, M3 and M5 rotate counter clockwise while those on arms M2, M4 and M6 rotate clockwise.

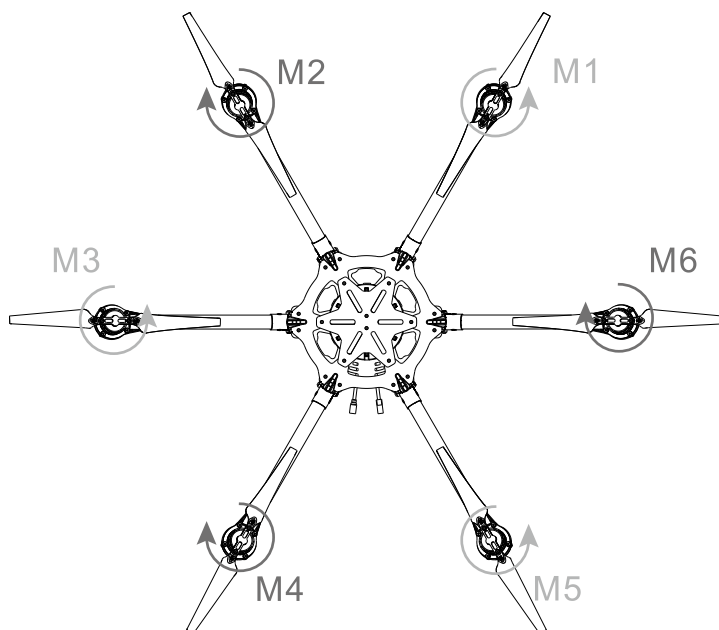


Mounting Electronics and Wiring

Eight positions are reserved for mounting a flight control system, wireless video transmission module, receiver, and other accessories. The DJI A2 flight control system has been used here as an example. If using an A2, follow mounting and wiring instructions found in the A2 flight control system user manual. If using the DJI WK-M flight control system, please refer to the WK-M user manual for connections. Also be sure the firmware on your DJI flight controller has been updated to the latest version.


Instructions

1. Attach IMU module to the IMU area of the center frame. Ensure that it points toward the nose.
2. Attach the PMU module to the center frame.

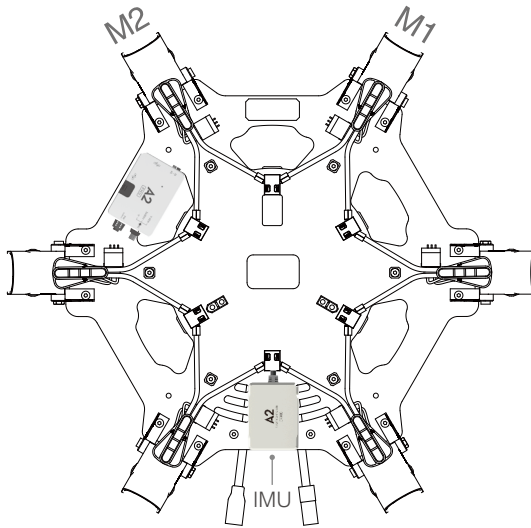


Only mount the IMU in the IMU position of the center frame.


3. Mount the flight controller in the reserved position near the PMU module.

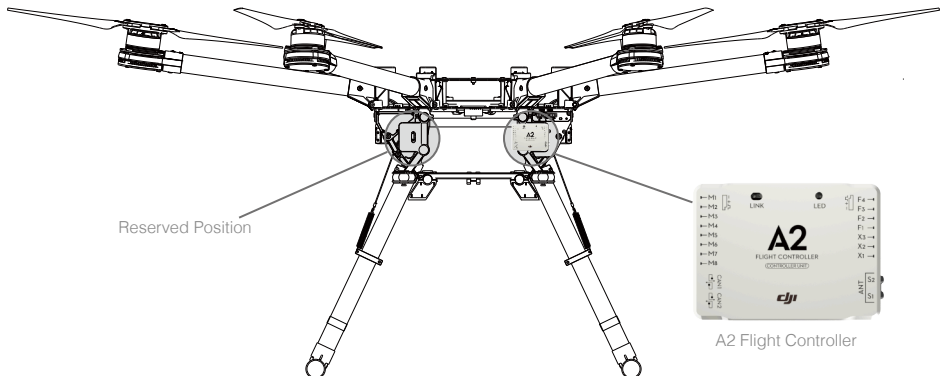


4. Attach the GPS collapsible mount to the center frame using M2.5×8 screws.
5. Mount a GPS module to the GPS mount with a bracket. Ensure the arrow points toward the nose and avoid catching your fingers in the bracket when folding for transportation.

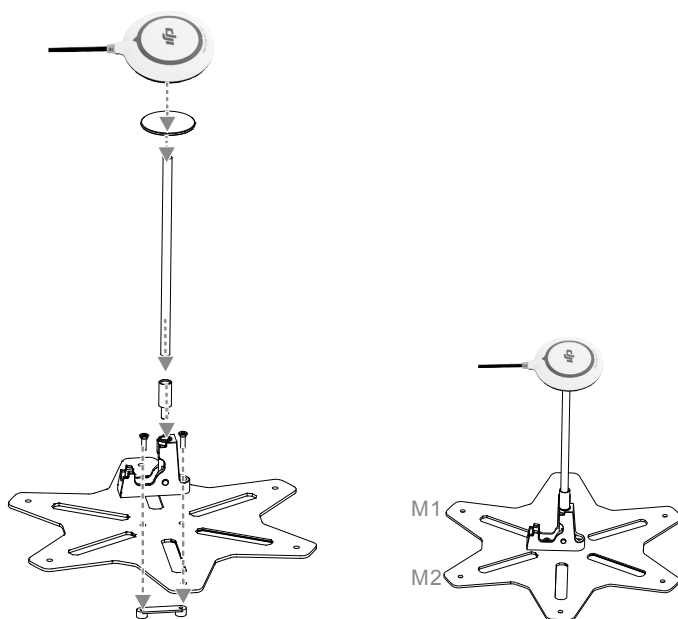

6. The other reserved positions are indicated in the diagram below and can be used for mounting a receiver, LED flight indicator, iOSD module and wireless video transmission module.

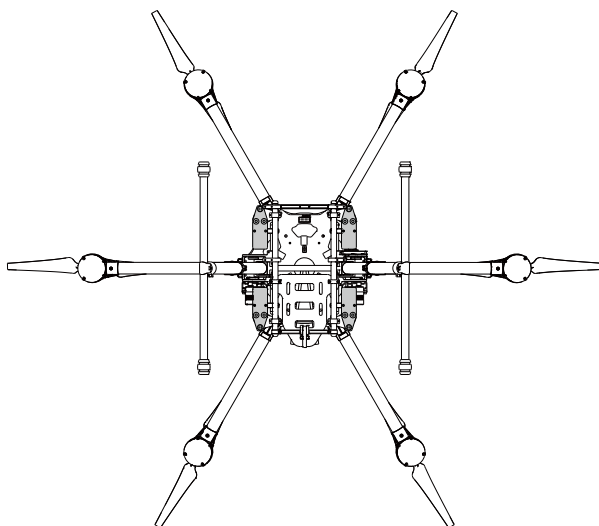


7. Check that every anti-drop screw has been firmly installed in the reserved positions. Thread locker is recommended.
 - (1) Remove the anti-drop screws to apply appropriate thread locker.
 - (2) Replace and tighten.
8. Note that the dampers are 30° silicon rubber. If you use other dampers or vibration absorbing balls, the quality of your aerial photography may be affected.

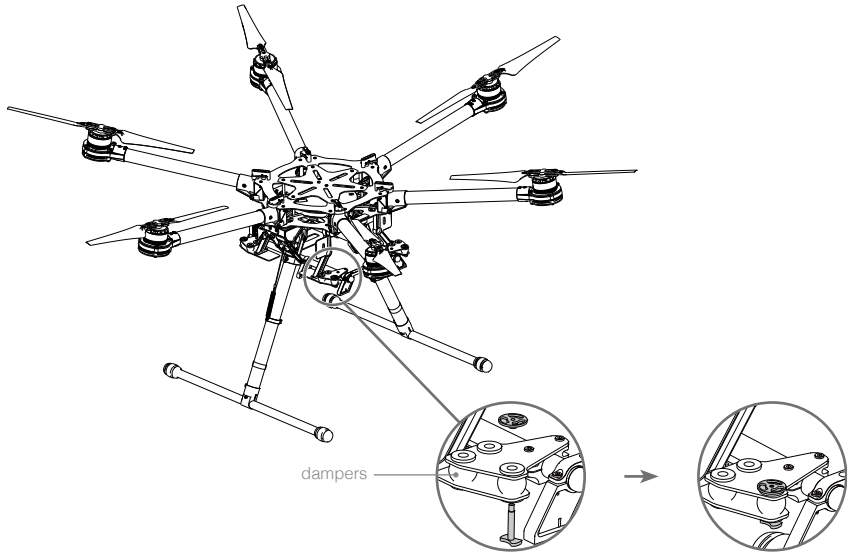


- Mount the GPS with a bracket to avoid interference from the center frame power board.
- Use glue to install the GPS bracket. Ensure it is firm and stable before every flight.
- Always test motors using the Assistant Software after installation. Refer to your flight control system user manual for details.

Connecting the flight controller to the center frame

1. Connect the flight control system according to your flight control system user manual.
2. Plug in the connector sets to the ESC signal outlet on the center frame. Then plug in the connector set to flight controller as shown below.
 - (1) Yellow 4-pin cables are for M1~ M4 connections. The yellow cable should be connected to M1.
 - (2) Brown 4-pin cables are for M5~ M6 connections. The brown cable should be connected to M5.
 - (3) Black 4-pin cables are for four continuous ground pins connections. M1~M4 are connected as the following diagram shows.

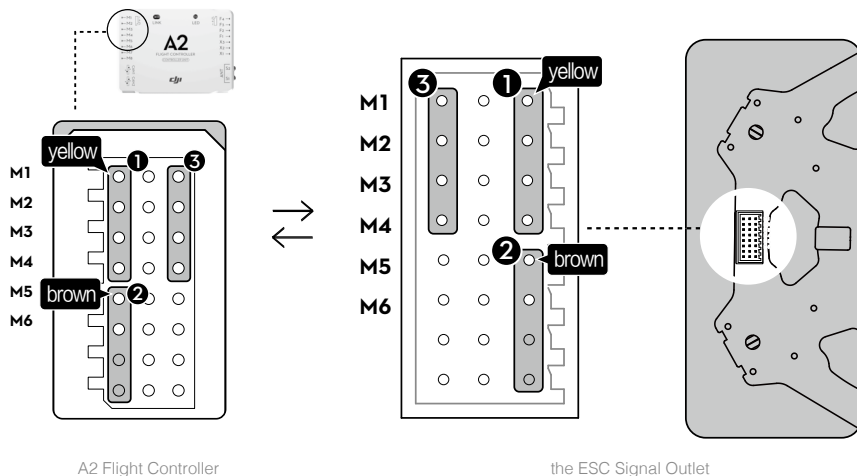


! If using a DJI WK-M flight controller, you must use the wires that came with the WK-M. M1 through M6 correspond to each motor number.

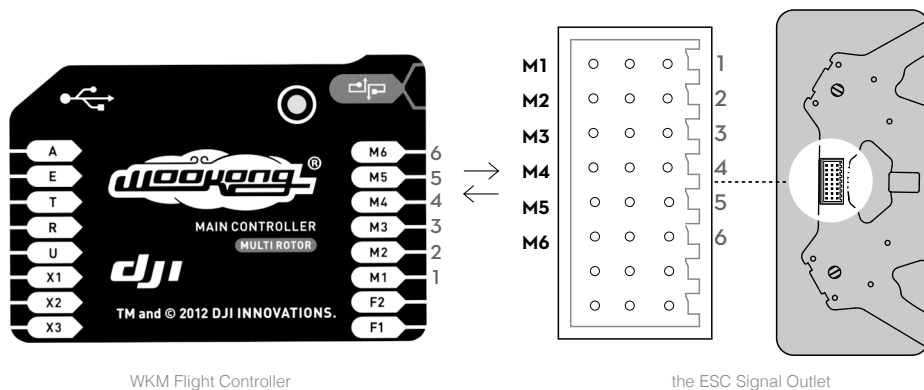

Connecting the flight controller and landing gear

1. Connect the left servo (between M3 and M4) cable to the "L" port of the landing gear control board.
2. Connect the right servo (between M5 and M6) cable to the "R" port of the landing gear control board.
3. For the A2 flight control system, connect the F1 port of the flight controller to the "IN" port of the landing gear control board. Other flight control systems connect a 2-position channel receiver to the "IN" port.

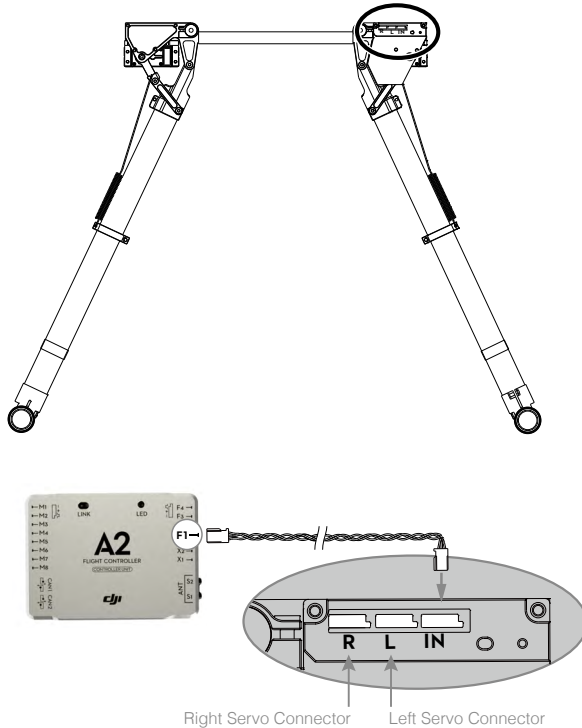


- If right and left servo cables are reversed, the landing gear will not function properly.
- Connect all wires carefully and neatly to avoid cable damage caused by frame edges.

Connecting XT60 Ports on the Center Frame

The bottom board is a power distribution board with three XT60 connectors for battery power.

Instructions

1. Connect the PMU power cable to the XT60 connector on top of the bottom board.
2. Connect the landing gear control board cable to the XT60 connector on the bottom of the bottom board.
3. Other connectors can supply power for other DJI devices, as required.

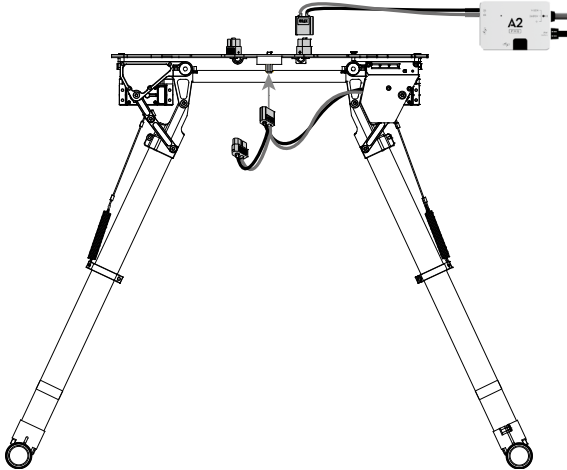


Installing Battery


Soldering battery connectors

AS150 spark-proof connectors are used. They must be soldered to your battery power cables.

1. Remove the original battery connectors. Avoid cutting the power and ground cables at the same time, as this can cause a short circuit. We recommend wrapping unsoldered cables with insulating tape to prevent accidental connections.
2. Pass the black ground wire through the black housing. After passing the wire through, solder the female bullet connector to the ground wire. Wait for the soldered connection to cool, then pull the housing back over the bullet connector.
3. Screw and pass the red power wire through the red housing. After passing the wire through, solder the male bullet connector to the power wire. Wait for the soldered connection to cool, and then screw and pull the housing back over the bullet connector.

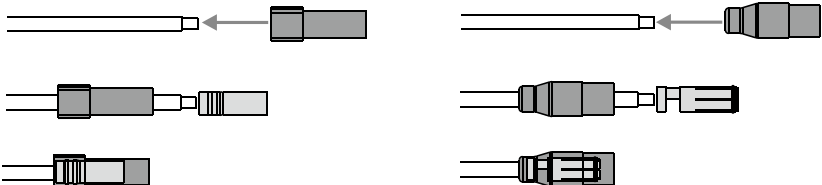



Connectors soldering diagram

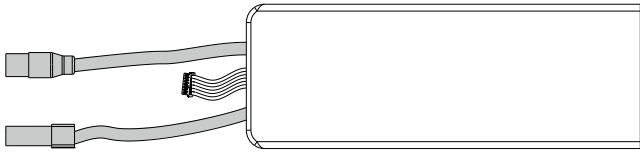

Connectors are soldered

Installing and connecting battery

1. Attach battery to battery tray. Do not use an oversized battery. Maximum installation dimension is 80mm X 120mm X 200mm.
2. Connect the black connector and then the red connector to power on. Disconnect the red connector then black connector to power off.

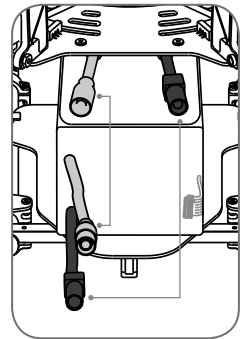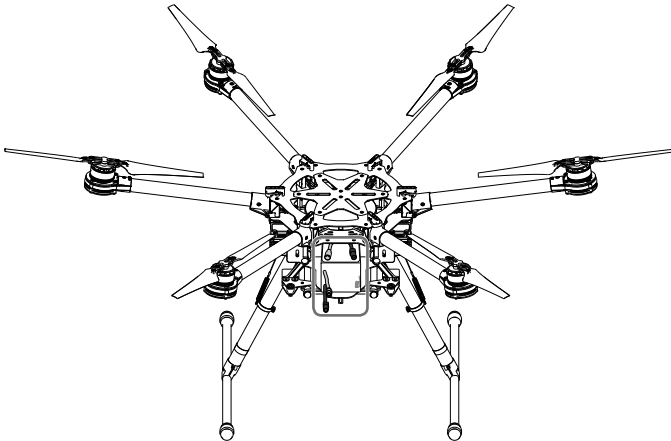


Setting Up the Landing Gear

Using a 2-position RC transmitter switch, landing gear retraction can be carried out remotely.

Setting up the transmitter



Select a 2-position switch (default setting is OK) as the control input for the landing gear. Ensure the corresponding receiver port is connected to the "IN" port on control board. For the A2 flight control system, connect the flight controller's F1 port to "IN" port on control board.



Upper: Toggle the switch to this position to raise the landing gear.



Lower: Toggle the switch to this position to lower the landing gear.

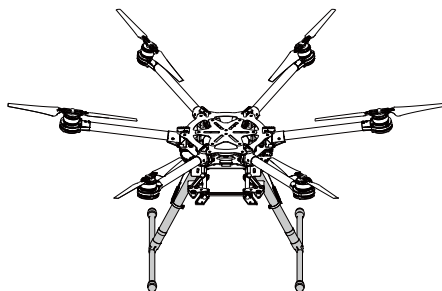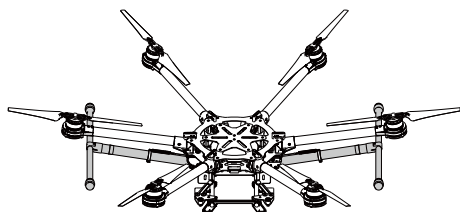

- If the transmitter switch has a FailSafe function, set the FailSafe value to the [Lower] position. This ensures that the landing gear will lower automatically when the receiver enters FailSafe mode.
- To avoid accidental switch triggering, slide levers or other controls can be used for landing gear control.

Usage procedures

1. Ensure transmitter and receiver batteries are fully charged.
2. Toggle the switch to the [Lower] position, and then turn on the transmitter.
3. Ensure the "R", "L" and "IN" connections are correct.
4. Ensure the landing gear is in the [Lower] position, then power on the system. If a solid green LED on the landing gear control board lights up, everything is normal. If it flashes green slowly, re-calibrate the system according to instructions in "Recalibrating Servo Travel".
5. Toggle the switch to the [Upper] position ONLY AFTER takeoff.
6. Toggle the switch to the [Lower] position for landing.



- Servo power will shut off 3 seconds after the landing gear has reached its target position.
- When powering on the system, if the transmitter switch is in the [Upper] position, the LED will flash red quickly as a warning. Toggle the switch to the [Lower] position to continue.
- If there is an abnormal signal or no signal input into the "IN" port, the LED will slowly flash red. Check receiver and connections for problems.
- If servo power consumption is too high, the LED will light up red. If this lasts more than 4 seconds, the landing gear will lower and the LED will flash green slowly. Re-calibration is needed before flying.
- A2 flight control system users can use the A2 Assistant to set intelligent gear on the "Advanced" page. Refer to the "A2 user manual" for details.

LED Control Board Indicator


System normal	 — Solid green.
Calibration required	 Blinks rapid green.
Recalibration required	 Blinks slow green.
Calibration failed	 — Solid yellow.
Enter calibration mode	 Blinks rapid yellow.
System calibrating	 Blinks slow yellow.
Motor stalled	 — Solid red.
Unsafe startup alert	 Blinks rapid red.
Input signal abnormal	 Blinks slow green.

Landing Gear Specifications


Parameter	Range	Parameter	Range
Working Voltage	3S~6S (LiPo)	Input Signal	PWM (High-Pulse Width 800us~2200us)
Working Current	Max 1A@6S	Output Signal	PWM (Mid Position is 1520us) in 90Hz
Working Temperature	-20~70° C	Output Voltage	6V
Total Weight	875g	Servo Travel	150° (Minimum 120°)

Mounting the Gimbal


Before assembling the gimbal, install the GCU as shown below. Be sure to install on the side as shown below. A DJI Z15-GH4 (HD) gimbal has been used as an example in the following diagrams.

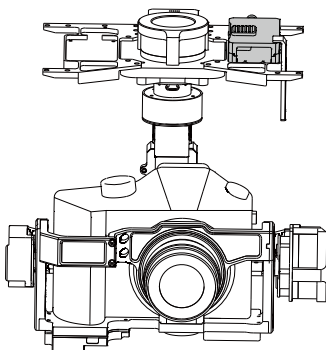

The connectors on gimbal should be removed for better performance, then the gimbal can be mounted to the lower connection points. Users of DJI Z15-5N / 7N gimbal, refer to the [DJI Z15-5N / 7N Gimbal Mounting Notes \(Page 21\)](#) for details.

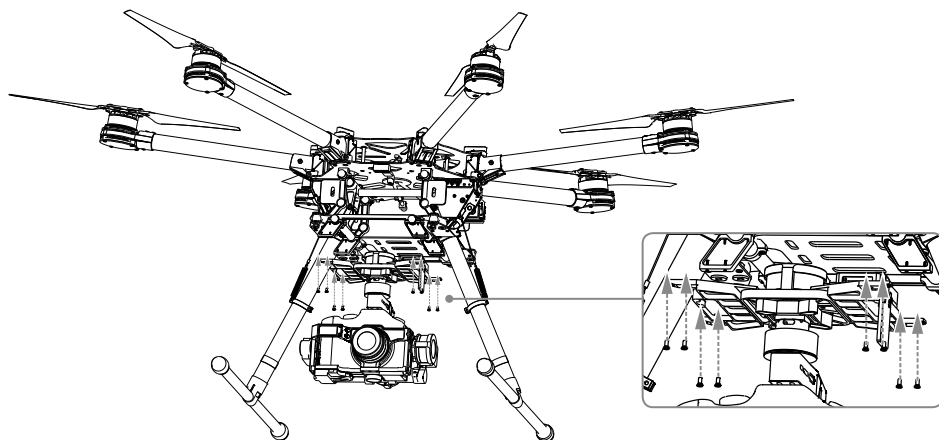

Check that the system's center of gravity is on the line as shown in the diagram below.

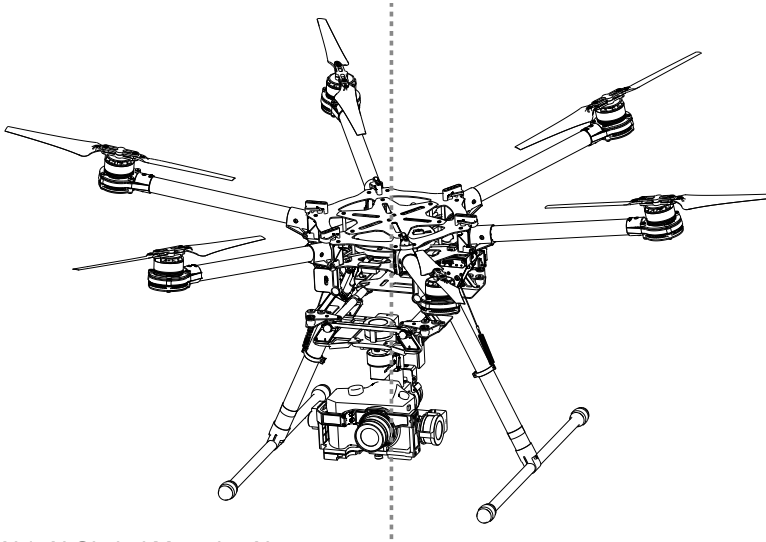



DJI Z15-5N / 7N Gimbal Mounting Notes



- Due to the size restriction of the Z15-5N / 7N gimbal, users should purchase extended landing gear legs (used with Z15-5N / 7N gimbal) to avoid damage and/or failure during the self-test. Refer to the [Part List Package No.34 \(Page 31\)](#) for details.
- Follow the [Mounting the Landing Gear \(Page 6\)](#) instructions to mount extended landing gear legs. Then the gimbal can be mounted as shown below.



Package No.34 is for users whose landing gear legs are 300mm. Users whose landing gear legs are 350mm have no need to purchase this part.

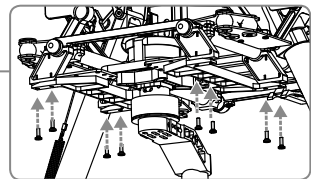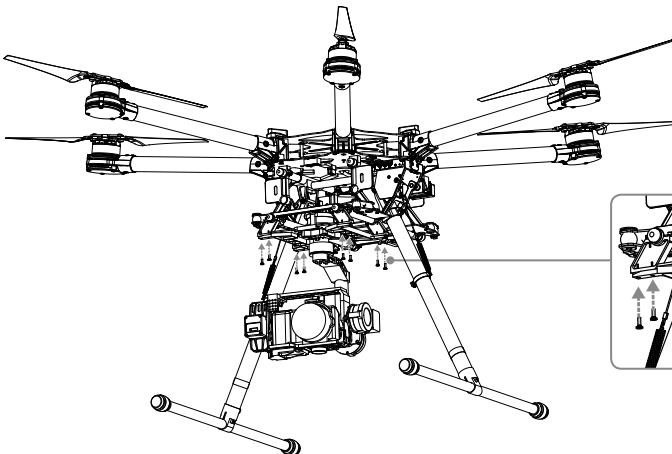


Appendix

ESC Sound

ESC State	Sound
Ready	♪1234567--B--B
Throttle stick is not at bottom	BBBBBB...
Input signal abnormal	B-.....B-.....B...
Input voltage abnormal	BB...BB...BB...BB...

ESC LED

ESC State	LED
Standby	Off
Motor rotating	Solid Red or Green On
Motor rotating at full throttle position	Solid Yellow On

 DJI ESCs are specifically designed for multi-rotors. When used with DJI autopilot systems parameters and travel ranges do not have to be calibrated.

Specifications

Frame	
Diagonal Wheelbase	900mm
Frame Arm Length	358mm
Frame Arm Weight (with Motor, ESC, Propeller)	316g
Center Frame Diameter	272mm
Center Frame Weight (with Landing Gear Mounting Base, Servos)	1185g
Landing Gear Size	460mm(Length)×450mm(Width)×360mm(Height)
Motor	
Stator Size	41×14mm
KV	400rpm/V
Max Power	500W

Weight (with Cooling Fan)	158g
---------------------------	------

ESC

Working Current	40A
Working Voltage	6S LiPo
Signal Frequency	30Hz ~ 450Hz
Drive PWM Frequency	8KHz
Weight (with Radiators)	35g

Foldable Propeller (1552/1552R)

Material	High strength performance engineered plastics
Size	15x5.2 inch
Weight	13g

Flight Parameters

Takeoff Weight	4.7Kg ~ 8.2Kg
Total Weight	3.3Kg
Power Battery	LiPo (6S, 10000mAh~15000mAh, 15C(Min))
Max Power Consumption	3000W
Hovering Power Consumption	1000W (@6.8Kg Takeoff Weight)
Hovering Time	18min (@12000mAh & 6.8Kg Takeoff Weight)
Working Environment Temperature	-10° C ~ 40° C


Gain Value Settings

Flight Control	Basic			Attitude		
	Pitch	Roll	Yaw	Pitch	Roll	Vertical
A2	110%	110%	120%	220%	220%	120%
WooKong-M	160%	160%	160%	190%	190%	100%

FAQ

Soldering the ESC

Be sure to solder the thick wires and fine wires correctly when soldering an ESC to the frame arm. Clockwise (CW) and counter clockwise (CCW) motors have a different arrangement of the colored wires.

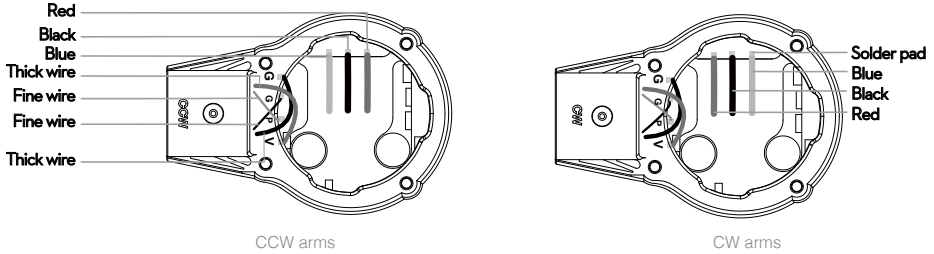

Remounting the Propellers

Instructions


1. Use two M3×12.3 screws and four washers to remount propellers.
2. Apply thread locker to the thread of the propellers mount first.
3. Affix screws with 4Kg · cm (0.4N · m) torque.



Refer to original screw tensions if you are unfamiliar with torque measurements. Applying thread locker to the propeller mount first avoids getting thread locker into the holes of the plastic propeller.




Loose screws cannot be securely locked with thread locker.

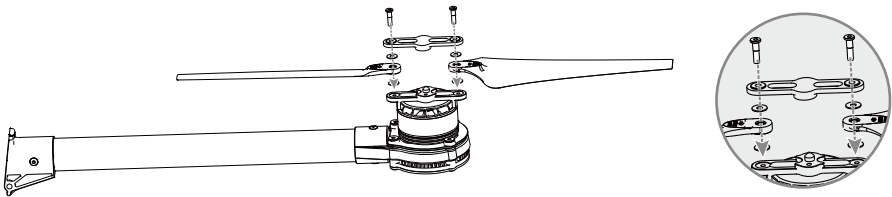

Propeller Precautions



Torque markers on the screws and propeller covers will give you a visual cue to check whether the propellers are loose. Check the torque markers before every flight.

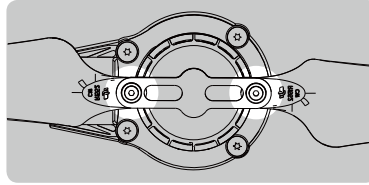

Using the Propeller Holder



Instructions

1. Insert the propeller blades into the propeller holder.
2. Attach the propeller holder to the frame arm.

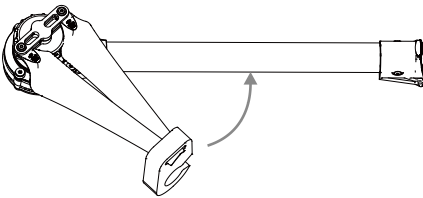


Assembling Motor Vibration Absorbers

A soft damper is part of the vibration absorber. Assemble soft dampers as shown below. Assembly is the same for CCW and CW propellers.

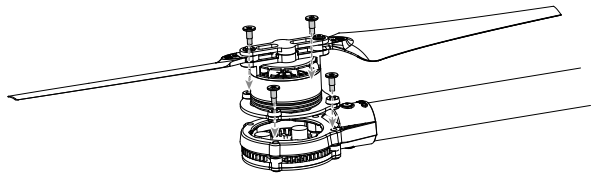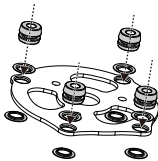

- Before installing the soft dampers, put the copper gaskets onto the four mounting holes on the carbon plate. Then put the soft dampers into the mounting holes.
- After tightening the screws, the vibration absorbers may be twisted. If this is the case, hold the motor with your thumbs under the base plate and fingers on the top carbon plate, and squeeze the plates together to make the vibration absorbers flat and parallel with the plates.

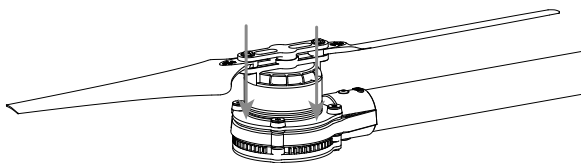


Remounting the Landing Gear Servo

Remounting servos is not recommended as they are pre-installed.

Instructions

1. Connect the left servo cable to the "L" port of the landing gear control board.
2. Connect the right servo cable to the "R" port of the landing gear control board.
3. Press and hold the SET button using a pin then power on. You will see a yellow LED beside the SET button flashing quickly. Wait as servos complete position initialization.
4. Make sure the arm connecting to the servo is parallel to the link as shown in the following diagram.
5. Assemble the left and right servos to the left (between M3, M4) and the right (between M5, M6) parts of the landing gear. Power off.

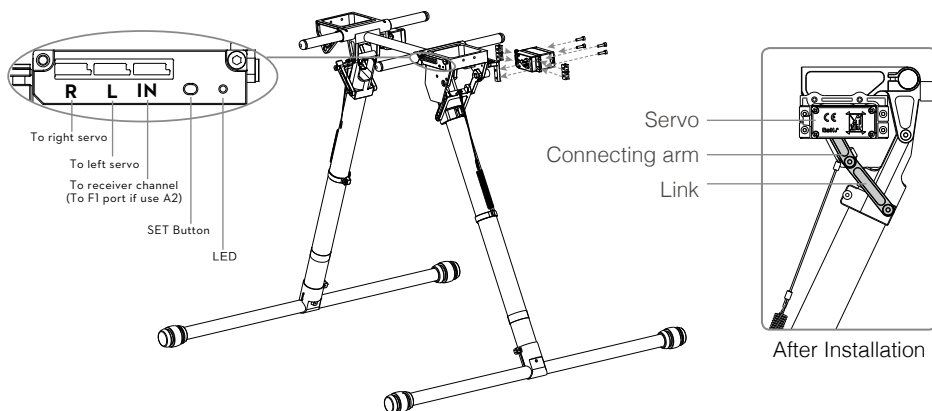

Recalibrating Servo Travel

Instructions


1. Keep your hands away from all moving parts.
2. Ensure the "R", "L" and "IN" connections are correct.
3. Keep the whole aircraft off of the ground during calibration, as landing gear will move.
4. Press and hold the SET button using a pin while powering on, then release. An LED will flash yellow quickly. Press the SET button again. Auto calibration will begin and the LED will flash yellow slowly. DO NOT obstruct any moving parts during auto calibration.
5. During calibration, the left landing gear will raise and lower, followed by the right landing gear.
6. After calibration, both the left and right landing gears will be lowered and the LED will display a solid green light. This indicates that the landing gear is working properly.




- If the LED is solid yellow after calibration, a problem has occurred. Carry out the instructions in "Remounting the Landing Gear Servo" then try again.
- Avoid obstructions during calibration. If the landing gear was obstructed, recalibration will be required, per the above steps.
- If the "R" and "L" servo cables are reversed, travel will not be measured correctly. Fix the connections and recalibrate the landing gear using the above steps.
- Landing gear travel has been pre-calibrated. Mechanical adjustment of the gear travel is not recommended.

Part List

If you require a replacement part, locate the part that you wish to replace in the following tables. Then order the package that comes with the specified part. The numbering of the part is defined as follow:




Frame Arm

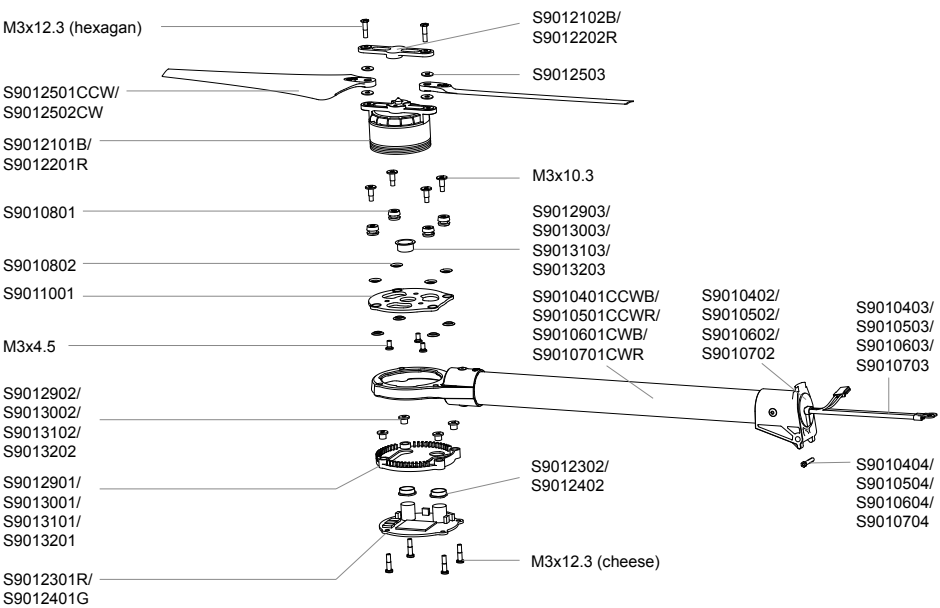

Package No.	Name	Part No.
4	S900 Frame Arm CCW - Black	S9010401CCWB, S9010402, S9010403, S9010404, M3x12.3 (cheese)
5	S900 Frame Arm CCW - Red	S9010501CCWR, S9010502, S9010503, S9010504, M3x12.3 (cheese)
6	S900 Frame Arm CW - Black	S9010601CWB, S9010602, S9010603, S9010604, M3x12.3 (cheese)
7	S900 Frame Arm CW - Red	S9010701CWR, S9010702, S9010703, S9010704, M3x12.3 (cheese)
8	S900 Motor Damping Unit	S9010801, S9010802, M3x10.3
10	S900 Motor Mount Carbon Board	S9011001, M3x4.5


21	S900 4114 Motor with black Prop cover	S9012101B, S9012102B, M3×4.5
22	S900 4114 Motor with red Prop cover	S9012201R, S9012202R, M3×4.5
23	S900 ESC with Red LED	S9012301R, S9012302, M3×12.3 (cheese)
24	S900 ESC with Green LED	S9012401G, S9012402, M3×12.3 (cheese)
25	S900 Propeller Pack	S9012501CCW, S9012502CW, S9012503, M3×12.3 (hexagon)

Center Frame

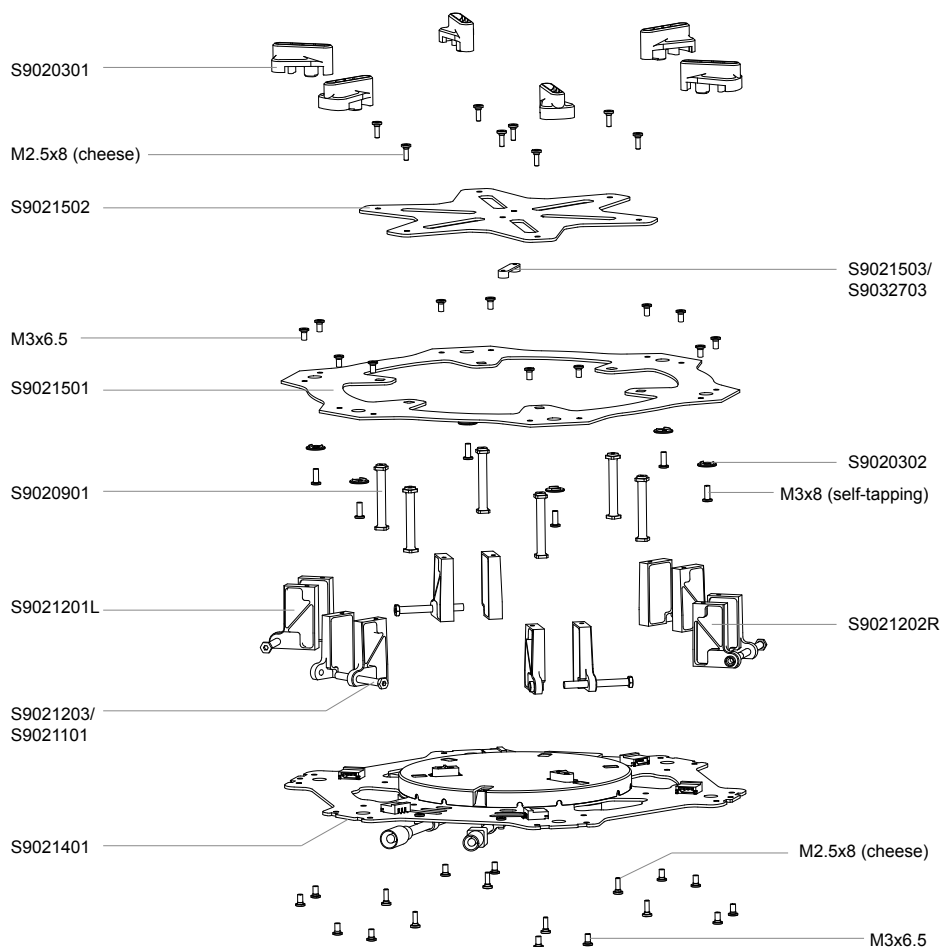


Package No.	Name	Part No.
3	S900 Lock Knob	S9020301, S9020302, M3×8 (self-tapping)
9	S900 Center Frame Support Pillar	S9020901, M2.5×8 (cheese)
12	S900 Arm Mounting Bracket	S9021201L, S9021202R, S9021203, M3×6.5
14	S900 Center Frame Bottom Board	S9021401, M3×4.5 (cheese), M3×8 (self-tapping), M3×6.5, M3×5.5
15	S900 Center Frame Top Board	S9021501, S9021502, S9021503, M3×6.5, M2.5×8 (cheese)
11	S900 Frame Arm Mounting Steel Shaft	S9021101

Landing Gear

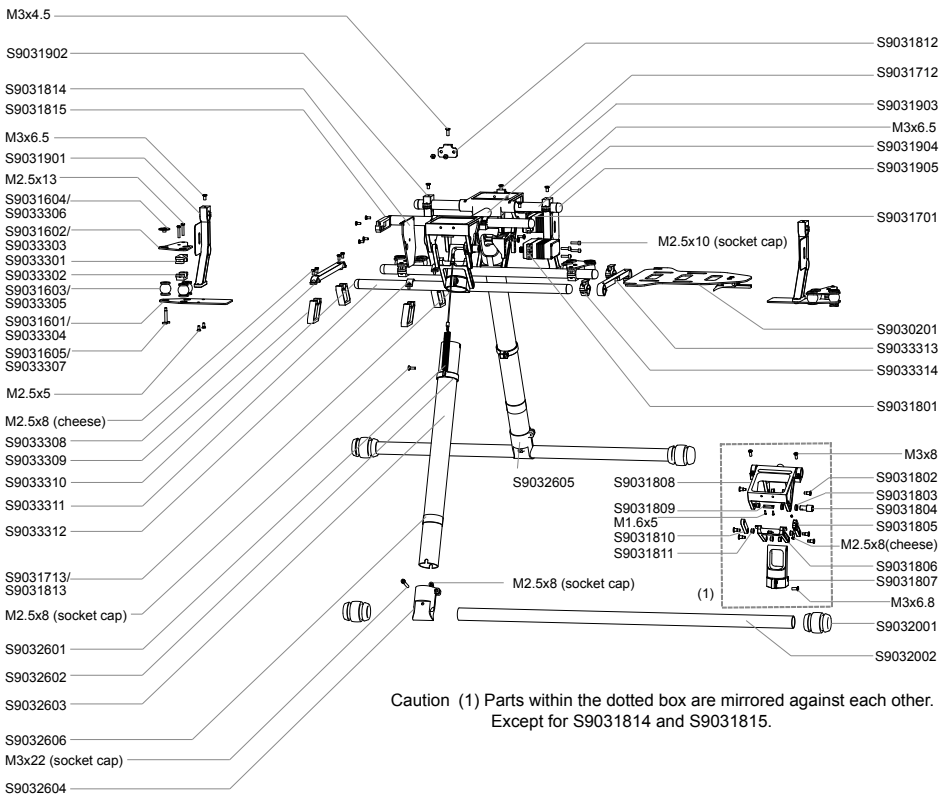

Package No.	Name	Part No.
16	S900 Gimbal Damping Bracket	S9031601, S9031602, S9031603, S9031604, S9031605, M2.5×5, M2.5×13
17	S900 Retractable Module (Right)	S9031701, S9031702, S9031703, S9031704, S9031705, S9031706, S9031707, S9031708, S9031709, S9031710, S9031711, S9031712, S0031713, M1.6×5, M2.5×10 (socket cap), M2.5×8 (cheese), M2.5×5, M3×8, M3×4.5, M3×6.8
18	S900 Retractable Module (Left)	S9031801, S9031802, S9031803, S9031804, S9031805, S9031806, S9031807, S9031808, S9031809, S9031810, S9031811, S9031812, S9031813, S9031814, S9031815, M1.6×5, M2.5×10 (socket cap), M2.5×8 (cheese), M2.5×5, M3×8, M3×4.5, M3×6.8
19	S900 Gimbal Damping Connecting Brackets	S9031901, S9031902, S9031903, S9031904, S9031905, M2.5×5, M3×6.5
20	S900 Landing Skid	S9032001, S9032002
26	S900 Landing Gear Leg	S9032601, S9032602, S9032603, S9032604, S9032605, S9032606, M2.5×8 (socket cap), M3×22 (socket cap)
2	S900 Battery Tray	S9030201
33	S900 Gimbal Mounting Accessories	S9033301, S9033302, S9033303, S9033304, S9033305, S9033306, S9033307, S9033308, S9033309, S9033310, S9033311, S9033312, S9033313, S9033314, M2.5×5, M2.5×13, M2.5×8 (cheese)

Miscellaneous

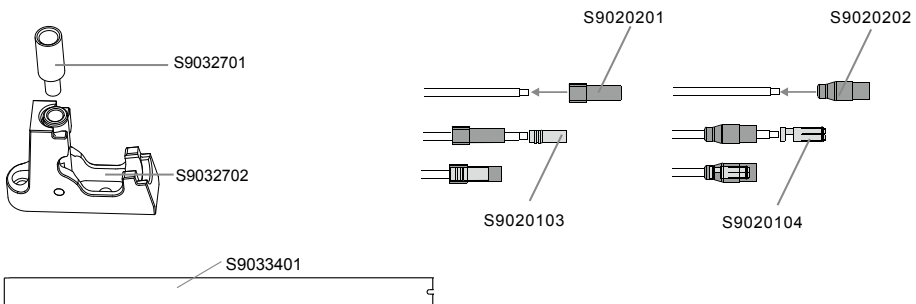

Caution: This part is used with Z15-5N / 7N gimbal.

Package No.	Name	Part No.
13	S900 Center Frame	Package 3, 9, 12, 14, 15
29	S900 Complete Arm [CW-RED]	Package 7, 8, 10, 11, 22, 23, 25, S9012901, S9012902, S9012903
30	S900 Complete Arm [CW-Green]	Package 6, 8, 10, 11, 21, 24, 25, S9013001, S9013002, S9013003
31	S900 Complete Arm [CCW-RED]	Package 5, 8, 10, 11, 22, 23, 25, S9013101, S9013102, S9013103
32	S900 Complete Arm [CCW-Green]	Package 4, 8, 10, 11, 21, 24, 25, S9013201, S9013202, S9013203
27	S900 GPS Holder	S9032701, S9032702, S9032703, M2.5×8 (cheese)
28	S900 Screw Pack	Assorted screws
1	S900 Power Cord Plug	S9020101, S9020102, S9020103, S9020104
34	S900 Extended Landing Gear Leg	S9033401

FCC Statements

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

User manual is subject to change without prior notice.

You may visit DJI official website to obtain the latest version of user manual.

<http://www.dji.com/product/spreading-wings-s900>

© 2014 DJI. All Rights Reserved.

